



Window Mount

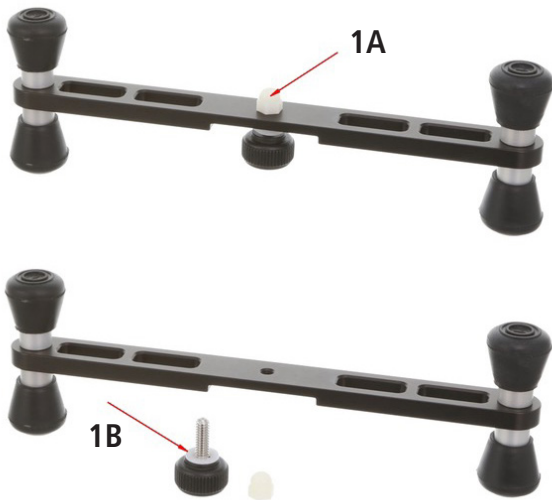

1. Start by first removing the white nylon protective cap (and discard this cap) from the cross bar B as shown in photo **1A**.
Make sure the white nylon washer is still on the knob that was removed as shown in photo **1B**.



2. Attach the crossbar to the main body photo **2A**. Pay close attention to insert the main body into the crossbar grooves as shown in photo **2B**.

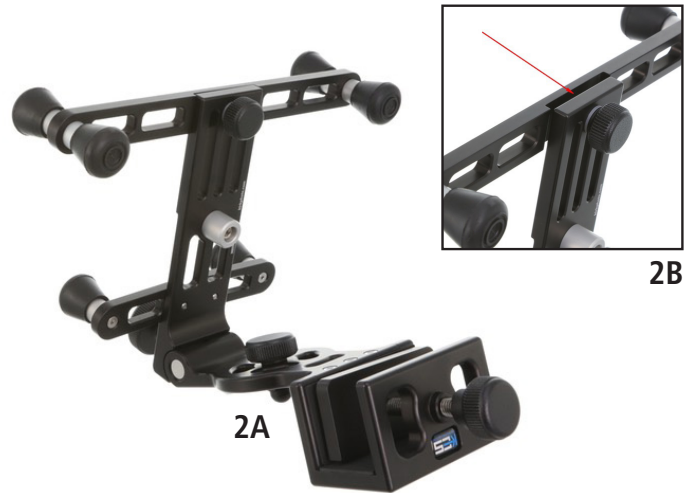

3. Remove the black plastic protective cap and discard as shown in photo **3A** and **3B**.
Now your window mount is fully assembled.

