

# Quick Release System for the Manfrotto MVH 500 Fluid Video Head



**1.** Take the enclosed  $\frac{5}{32}$  Hex Wrench (C) and remove the quick release from the bridge platform.



**2.** Start by fully locking the fluid head lock knob. Now take the enclosed T25 Torx Tip L Wrench (D) and remove the 4 Torx screws holding the original Manfrotto bridge.



**3.** With the 4 screws removed, gently lift up on the original Manfrotto bridge. This will allow you to remove the original bridge and the locking pivot. **Please note: still keep the Manfrotto fluid head lock knob in the lock position.**




**4.** Shown in this photo is everything that should have been removed from Steps 2 and 3.



**5.** Take the replacement bridge and locate the front and back as indicated on the replacement bridge.



**6.** Take the replacement bridge and reinstall the 4 Torx screws that were removed in Step 2 with Torx Wrench (D). Please note: still keep the Manfrotto fluid head lock knob in the lock position. **Make sure that the replacement bridge has the front to the front and back to the back.**

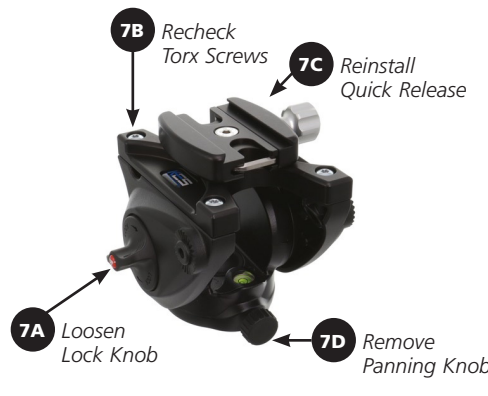

**7.**  
**(7A)** Loosen the fluid head lock knob.  
**(7B)** Recheck the 4 Torx screws to make sure they are fully tightened.  
**(7C)** Reinstall the quick release using Wrench (C).  
**(7D)** Remove the original panning knob.



**8.** Install the new panning lock knob. Your setup is now complete.